

Deployment Instructions



Dolphin

Jason's Cradle®
Man Overboard Solutions

Side 1

Clip halyard to safety wire at the rescue zone* and make fast

Then follow steps 1 to 6.




1. Remove Cradle from stowage bag.



2. Position the equipment at the rescue zone.*/**



3. Pass straps around two stanchions clip together and tighten.

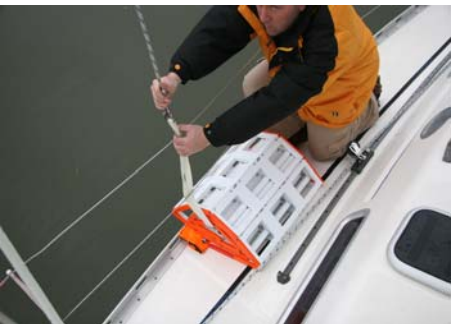

4. Attach halyard to white webbing***



5. Uncoil and deploy outboard.



6. Lower Cradle into the water ready for rescue.

* Rescue Zone – This is generally amidships which gives the helmsman optimal viewing capabilities during rescue and is the best location for the use of the equipment

** Red & Green End Caps – Facing outboard - Red to your left and Green to your right

*** Clip halyard outboard of the wires/guardrails to the free end of the cradle

Jason's Cradle® MOB systems

+44 (0)1202 874365

www.jasonscradle.co.uk

Manufactured by: Land and Marine Products Ltd

6 Aerial Park, Uddens Trading Estate, Wimborne, Dorset BH21 7NL T: +44 (0)1202 874365 F: +44 (0)1202 876296 E: info@jasonscradle.co.uk

Issue 1

Deployment Instructions



Jason's Cradle®

Man Overboard Solutions

Side 2

To use as a boarding ladder simply follow steps 1 to 6 as described in the MOB deployment instructions (overleaf) and then simply hook the white webbing strap around the two end nuts as shown below. Adjust the webbing strap as required to suit your vessel.



Jason's Cradle® MOB systems

+44 (0)1202 874365

www.jasonscradle.co.uk

Manufactured by: Land and Marine Products Ltd

6 Aerial Park, Uddens Trading Estate, Wimborne, Dorset BH21 7NL T: +44 (0)1202 874365 F: +44 (0)1202 876296 E: info@jasonscradle.co.uk

Issue 1